




LIVESTOCK EQUIPMENT

800 W. CORTEZ ST. | MONTEZUMA, KS 67867

MJELIVESTOCKEQUIPMENT.COM

620.846.6767

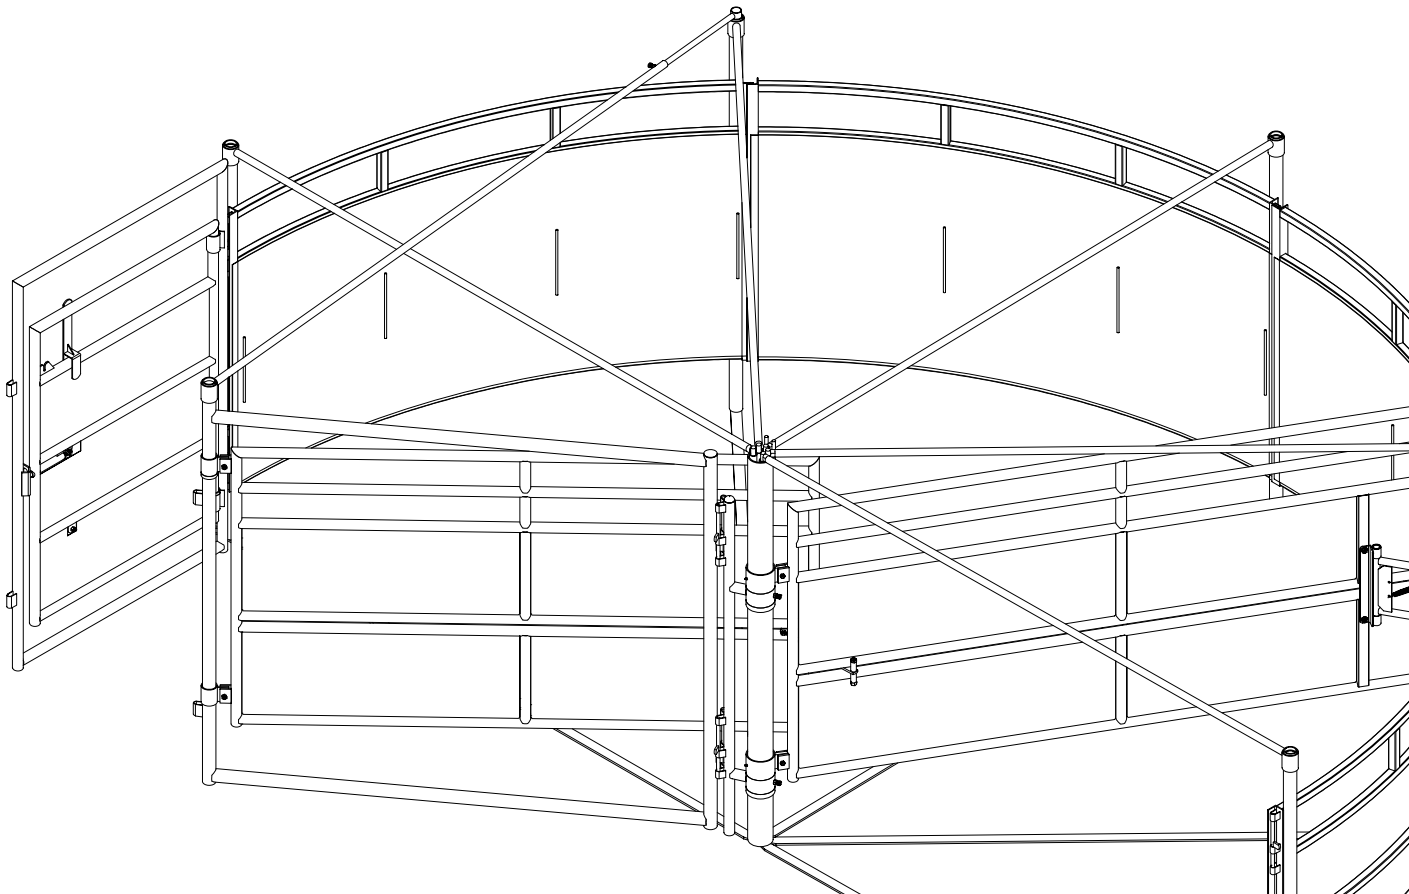


4-SECTION ELITE ELIMINATOR TUB with LOADOUT GATE


Instructional Manual

Parts List


4-Section Elite Eliminator Tub with Loadout Gate

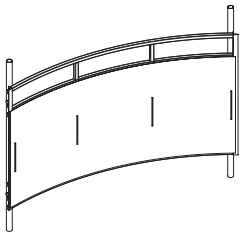


Double Leg Panel
(x1)

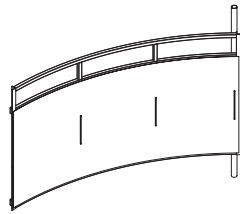


Single Leg Panel
(x3)

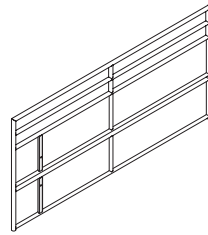


Eliminator
Tub Gate
(x1)

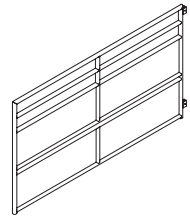

Eliminator Gate
(x1)

 


Loadout Gate
(x1)

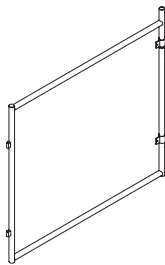


Eliminator Frame
(x1)




Pivot Post
(x1)

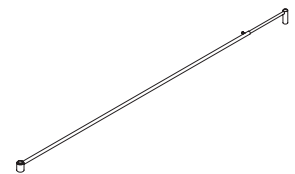

Adjustable
Spreader
(x1)

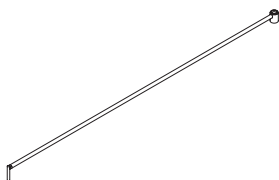


Eliminator Tub
Top Spreader
(x5)

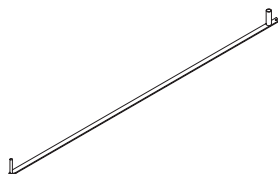


Eliminator Tub
Bottom Spreader
(x5)




Eliminator Latch
Handle
(x1)

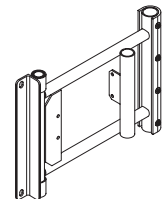

Eliminator Latch
(x1)

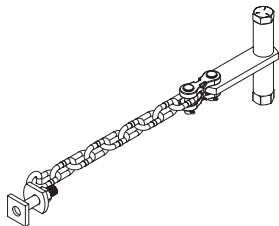

Eliminator Gate
Return Roller
(x1)

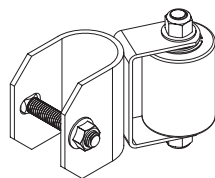

Eliminator Gate
Push Roller
(x1)



 
7" Extension
Spring
(x1)




7 Links x
1/4" Chain
(x1)

Parts List


4-Section Elite Eliminator Tub with Loadout Gate (cont.)




1/4" Quick Link
(x2)

 

90°/45° Bracket
(x1)

 

Bolt with Flat Iron
(x1)

 

1/2" x 3"
Carriage Bolt
(x2)



1/2" x 2"
Hex Bolt
(x4)





1/2" Flange Nut
(x2)



1/2" Hex Nut
(x5)

Step 1



Lay "Pivot Post" horizontally

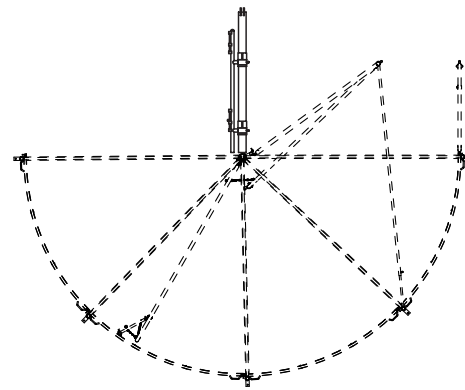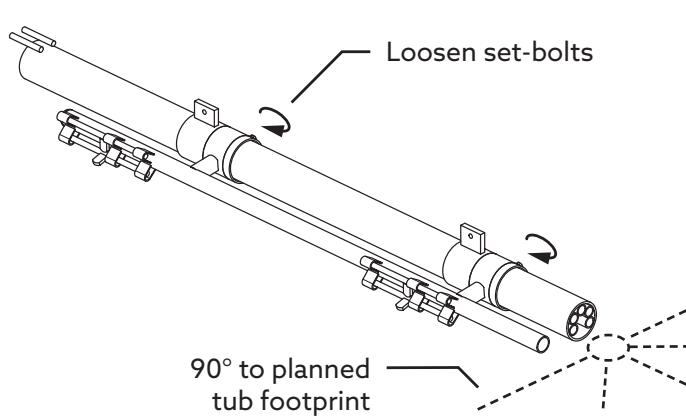

Top-down View

Step 2



Insert "Eliminator Tub Bottom Spreaders" [x5]

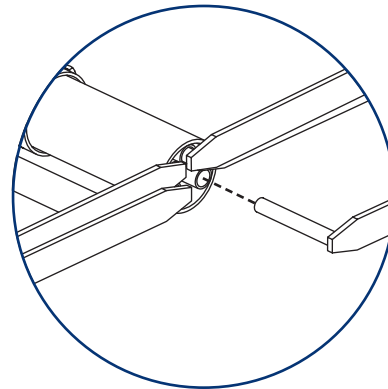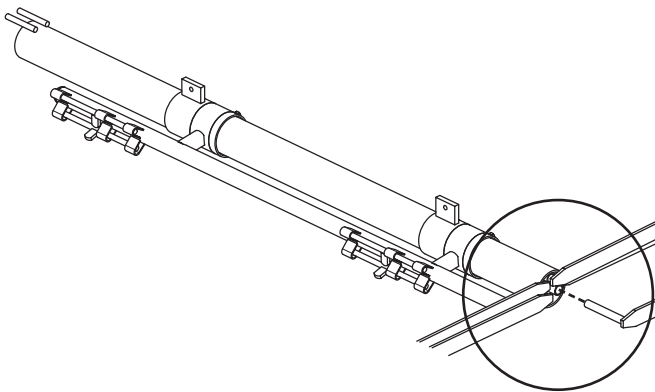

Spreader Connection

Step 3


Stand "Pivot Post" in upright position

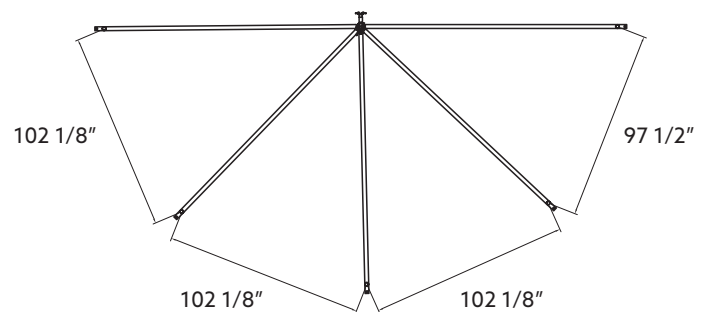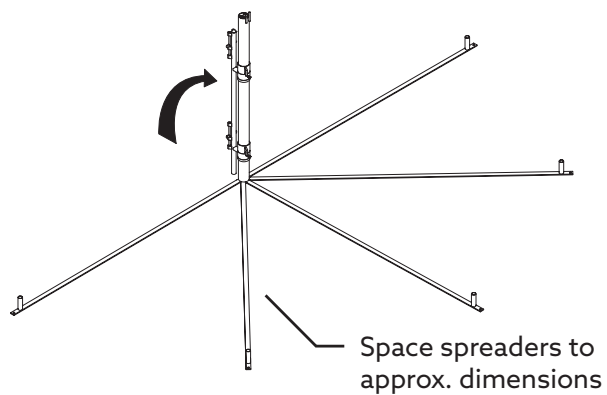


Top-down View

Step 4

Place “Double Leg Panel”

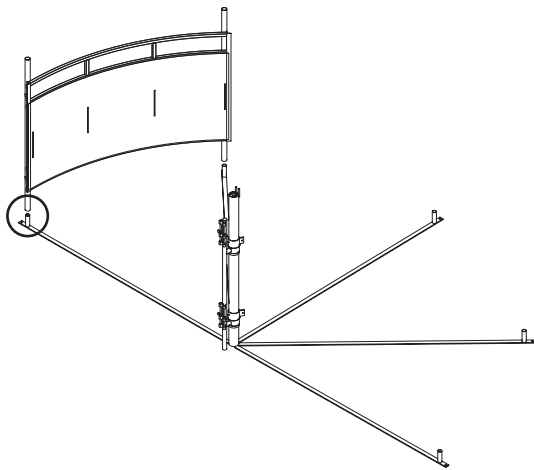


Panel legs go over
spreader tubes

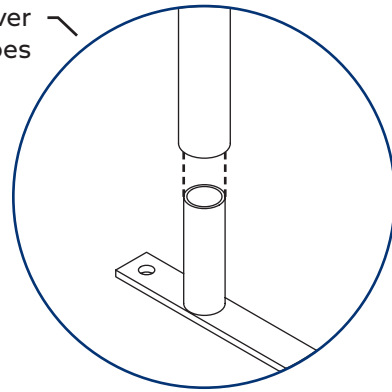


Leg Connection

Step 5


Place “Single Leg Panels” [x3]

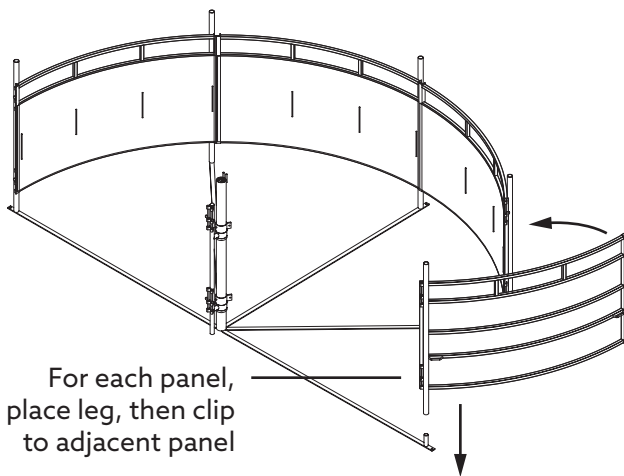

For each panel,
place leg, then clip
to adjacent panel

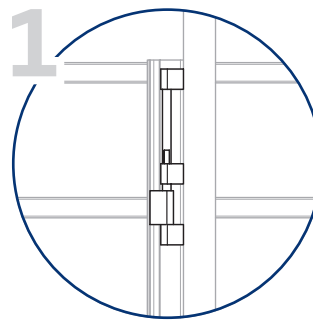

Top Clip


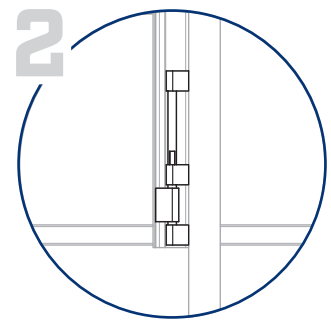


Bottom Clip


Allow weight to rest on top
clip; then, pin bottom clip

Step 6

Place “Eliminator Tub Top Spreaders” [x5]

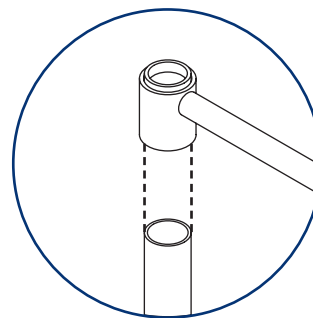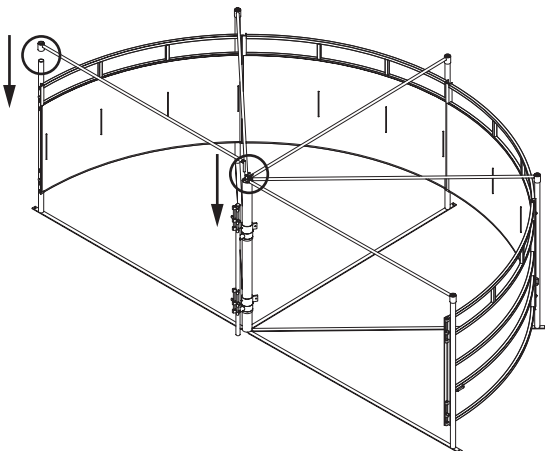

End Connection


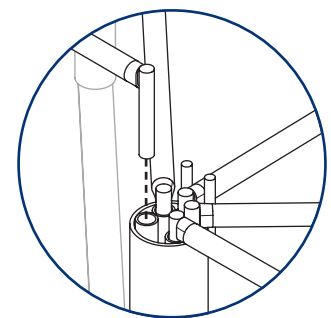


Center Connection

Step 7

Place "Loadout Gate" on preferred side*



*Left-side option shown

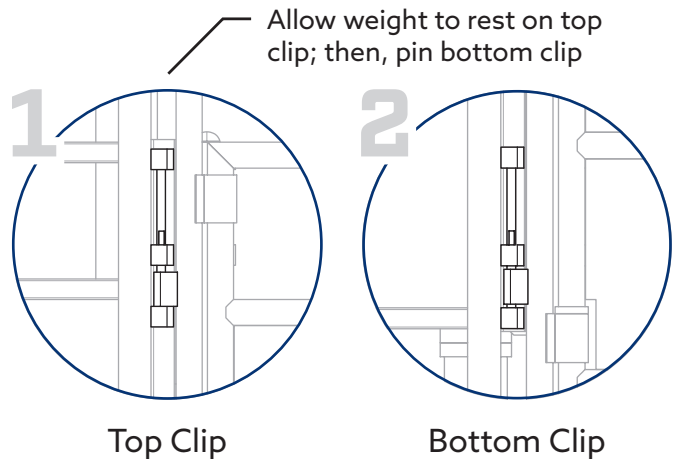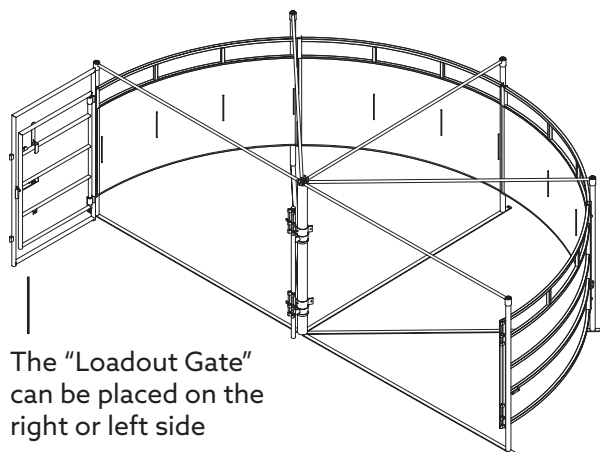

Step 8



Place "Eliminator Frame" on preferred side*

*Left-side option shown

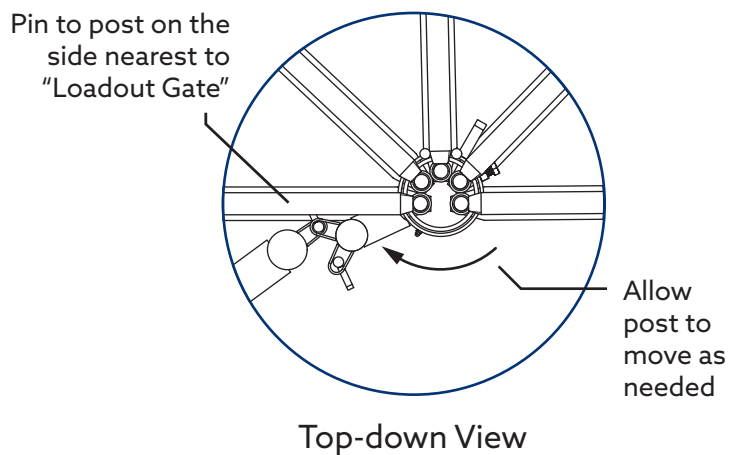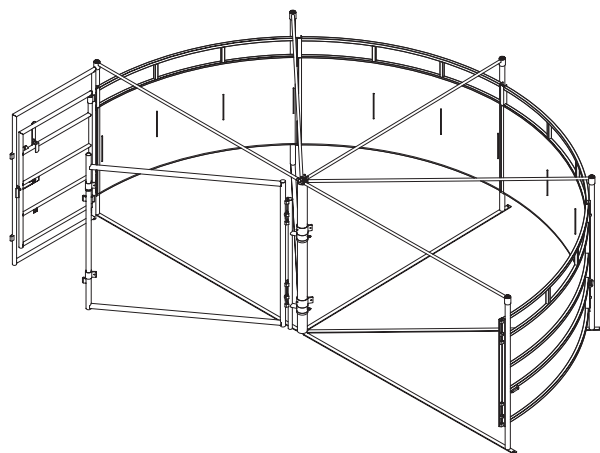



Step 9

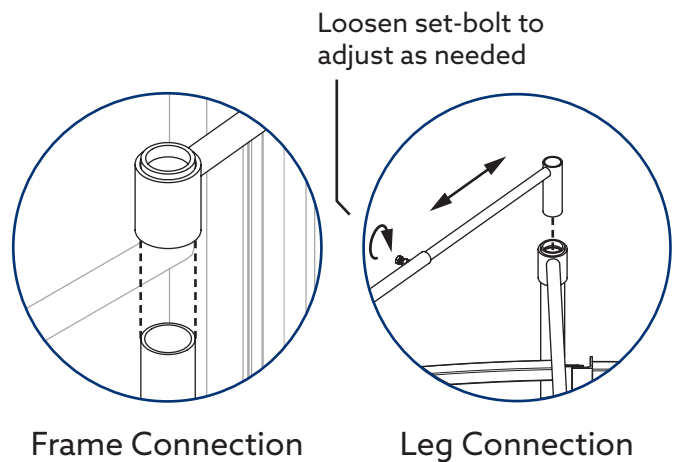
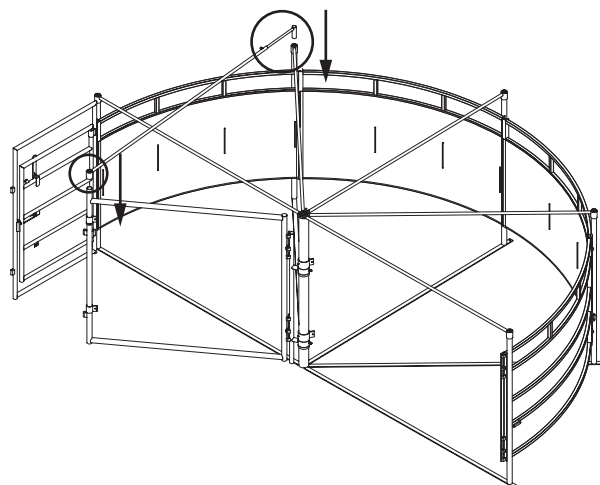
Place "Adjustable Spreader" on preferred side*




Step 10

 1/2" x 2" (x2)  1/2" (x2)

Attach "Eliminator Gate" to "Elim. Frame"

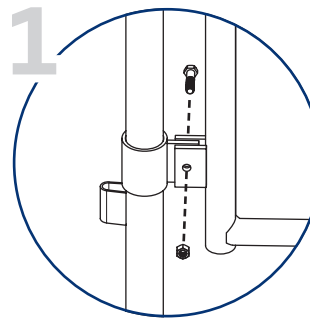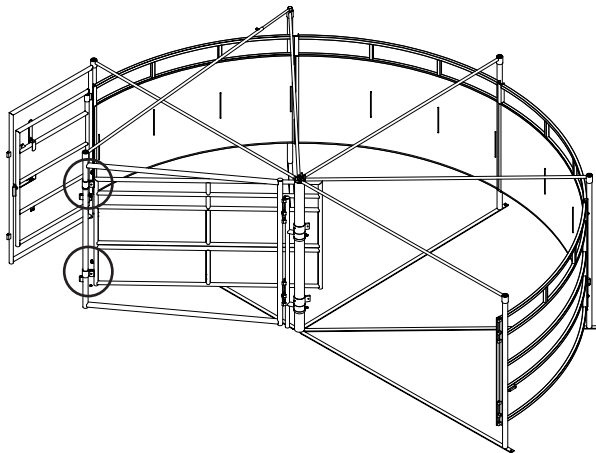

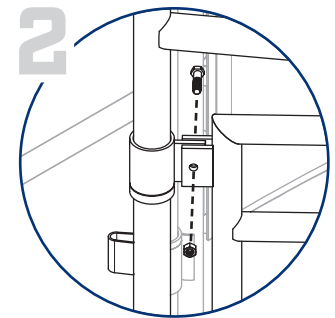

Bottom Hinge




Top Hinge


Step 11

 1/2" x 2" (x2)  1/2" (x2)


Attach "Eliminator Tub Gate" to "Pivot Post"

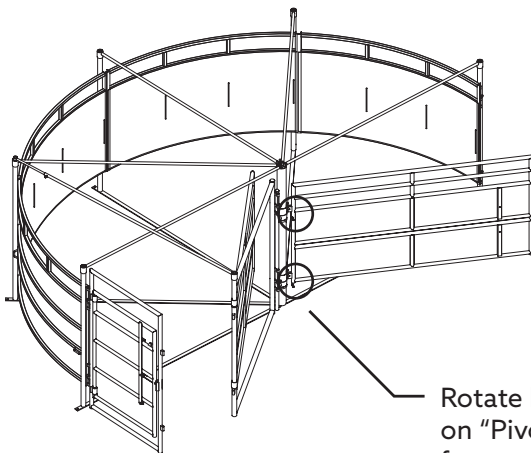

Rotate hinges
on "Pivot Post"
for access

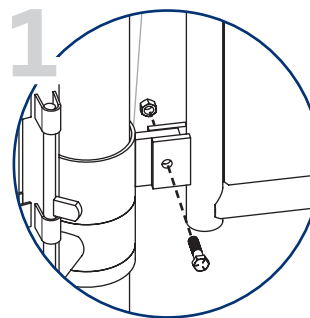

Bottom Hinge


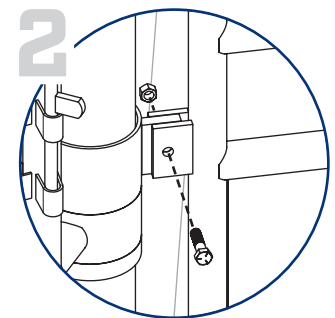


Top Hinge

Step 12

 Bolt w/ Flat Iron  1/2"

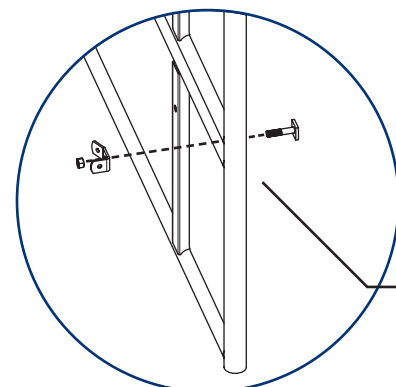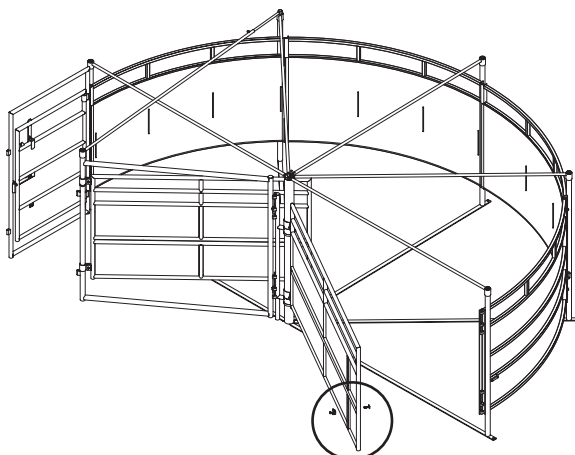

Attach "90°/45° Bracket" to end of "Elim. Tub Gate"




Insert
through
slot in
gate

End of "Elim. Tub Gate"


Step 13

 1/2" x 3" (x2)  1/2" (x2)


Attach "Eliminator Latch" to "Elim. Tub Gate"

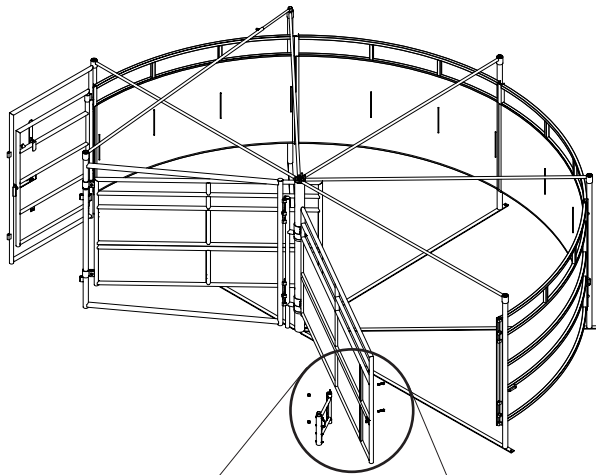

If necessary, use a hammer to seat carriage bolts

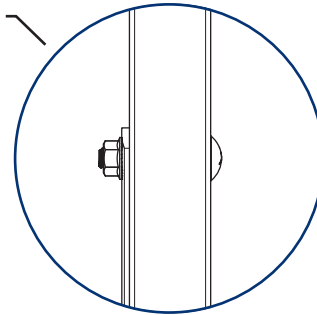


Seated Bolt

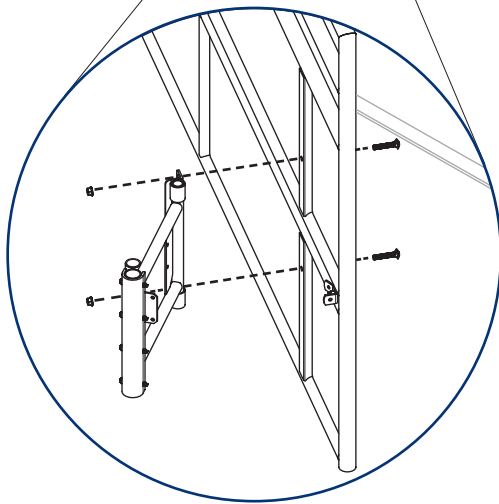

Latch Connection

Adjust "90°/45° Bracket" to create tension between latch and tub wall


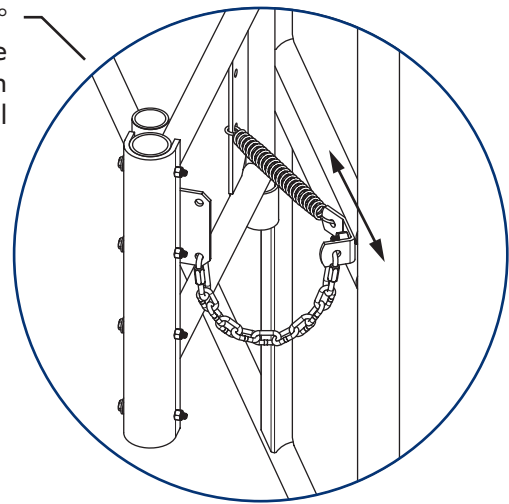


Attach Latch Components

"7 Links x 1/4" Chain" | "1/4" Quick Links" (x2)
"7" Extension Spring"

Step 14


Insert "Eliminator Latch Handle"

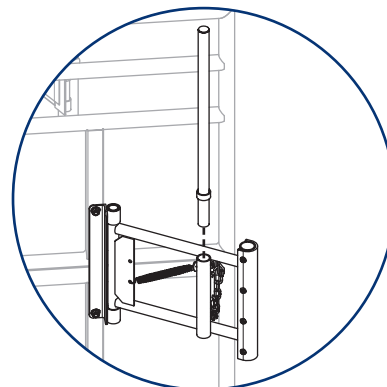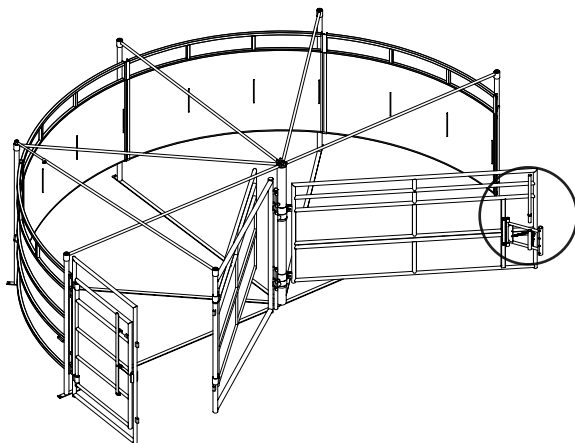


Handle Connection

Step 15

Attach "Eliminator Gate Push Roller" to "Elim. Gate"

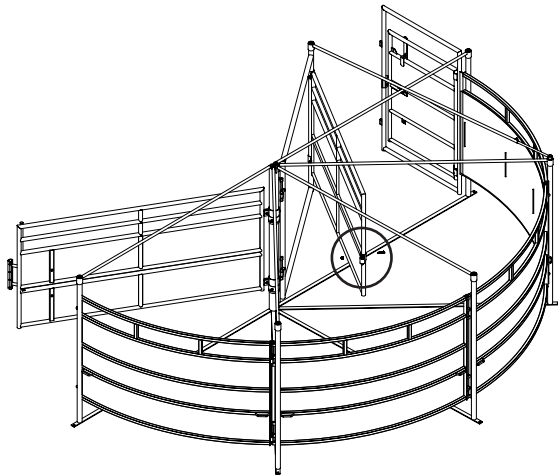


Roller is angled toward "Elim. Tub Gate"

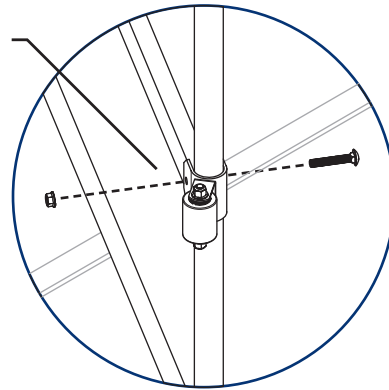

End of "Elim. Gate"

Step 16

Attach "Eliminator Gate Return Roller" to "Elim. Gate"

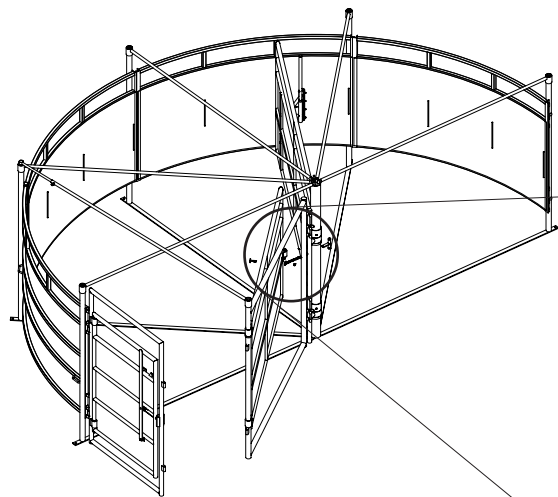


Chain Connector

Roller

Bolt

Reduce gap here

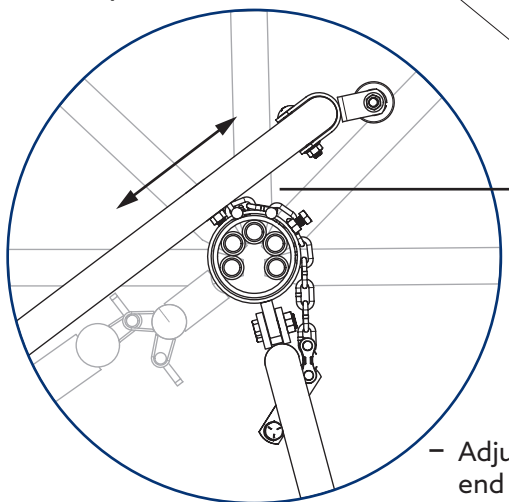


Adjust Placement
"Elim. Tub Top Spreaders" hidden

– Adjust chain end to reduce gap when tub is fully open


"Elim. Gate Return Roller" Connection
"Pivot Post" and "Elim. Frame" hidden

Step 17

Adjust "Adjustable Spreader" to level "Elim. Gate"

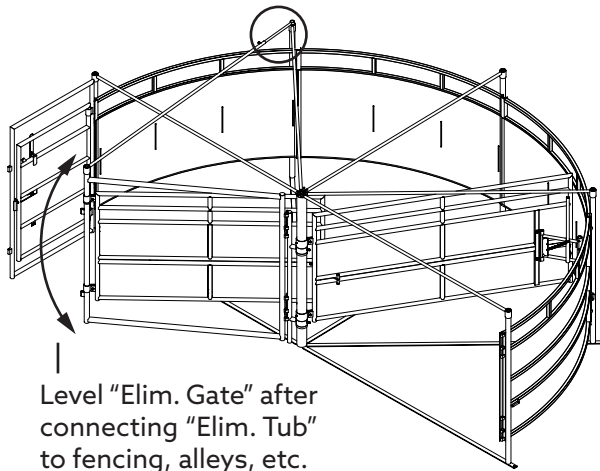

Loosen set-bolt
to adjust as
needed

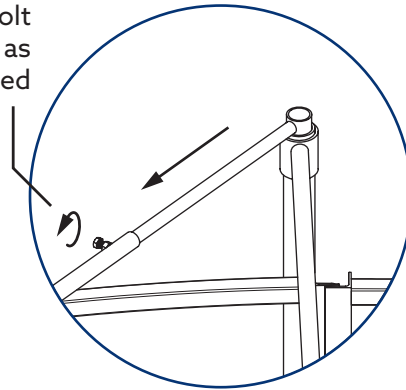

Adjust Spreader

Completed

4-Section Elite Eliminator Tub with Loadout Gate

